

de Montageanleitung
en Mounting instructions
fr Instructions de montage
sv Monteringsinstruktion
nl Montage-handleiding
it Istruzioni di montaggio
fi Asennusohje
es Instrucciones de montaje
da Monteringsvejledning
pl Instrukcja montażu
cz Montážní návod
hu Szerelési útmutató
el Οδηγίες εγκατάστασης
ru Инструкция по установке
zh 安装指导

Stellantriebe
Actuators
Servomoteur
Ställdon
Servomotoren
Servocomandi
Toimimootorit
Actuadores
Motorer
Siłowniki
Pohony
Motorok
Κινητήρες
Приводы
执行器

SSA/SSB/SSP31..
SSA/SSB/SSP81..
SSA/SSB/SSP61..

SSA..

 
SSB..

SSP..


1




2

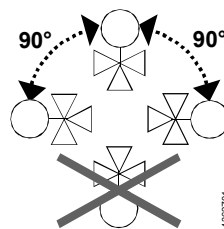


3

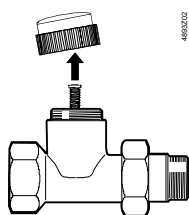 

 Siemens: VDN..., VEN..., VUN...,
 VPD..., VPE..., VD1..CLC, 2T../A
 VPP46..., VPI46..
 Honeywell, MNG, Cazzaniga, Heimeier, TA
 (TBV-C), Oventrop



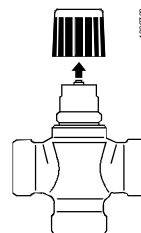


VVP45.. ¹⁾
 VXP45.. ¹⁾
 VMP45..
¹⁾ $k_{vs} \leq 6.3 \text{ m}^3/\text{h}$

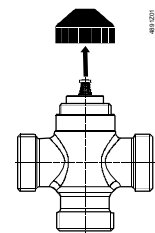 

VVP47..
 VXP47..
 VMP47..

   4

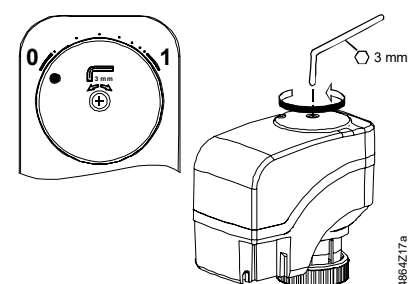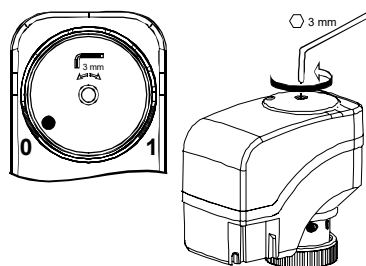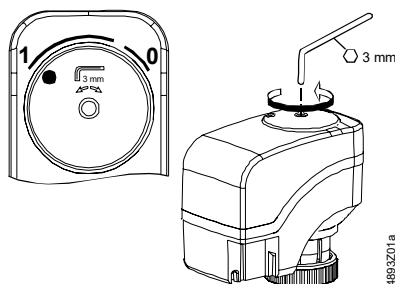


SSA..

SSB..

SSP..

5

 
AV..

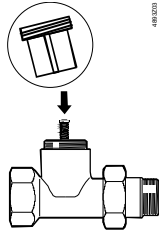

AV51	Beulco	M30x1
AV52	Comap ¹⁾	M28x1.5
AV53	Danfoss RA-N (RA 2000)	-
AV54	Danfoss RAVL	-
AV55	Danfoss RAV	-
AV56	Giacomini	-
AV57	Herz	M28x1.5
AV58	Oventrop < 2002	M30x1
AV59	Vaillant ¹⁾	-
AV60	TA (TBC) < 2002	M28x1.5
AV61	MMA Markaryd	M28x1.5




¹⁾ While stocks last

 AL100


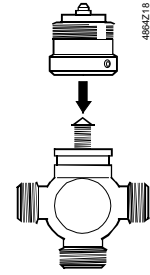


2W..
3W..
4W..

   6

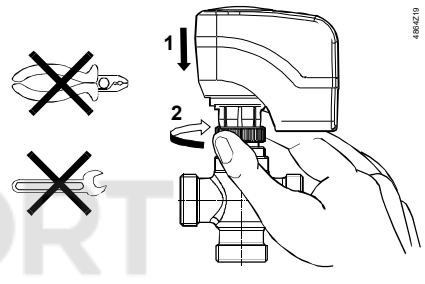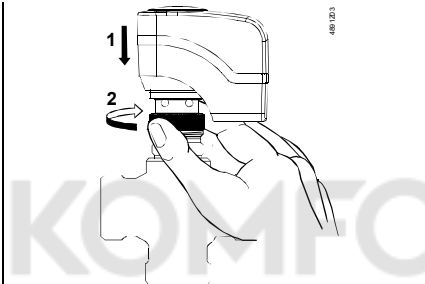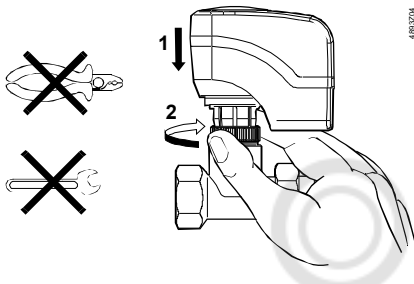

7

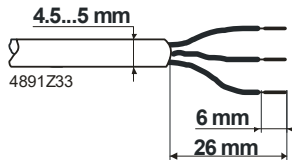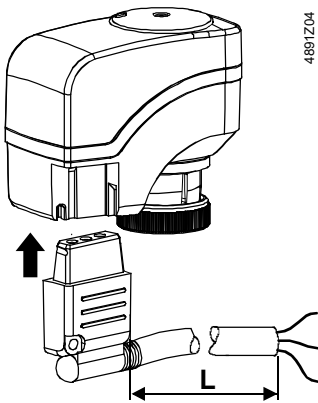  


	N	G	G0
de	Neutralleiter	Systempotential	Systemnull
en	Neutral	System potential	System neutral
fr	Neutre	Potentiel du système	Zéro du système
sv	Nolledare	Systempotential	Systemnoll
nl	Nul	Systeem-potentiaal	Systeemnul
it	Neutro	Fase del sistema	Neutro del sistema
fi	Nollajohdin	Järjestelmäpotentiaali	Järjestelmänulla
es	Neutro	Fase CA para equipos	Neutro CA para equipos
da	Nulleder	System-fase	System-nul
pl	Przewód zerowy	Potencjał systemowy	Zero systemowe
cz	Nulový vodič	Systémový potenciál	Systémová nula
hu	Nulla (N)	Rendszer fázis	Rendszer nulla
el	Ουδέτερος	Φάση	Ουδέτερος
ru	Нейтраль	Системный потенциал	Системная нейтраль
zh	电源零线	额定电源	额定电源零线

8

ASY..	L [m]	SSD..		
ASY3L15	1.5	SSD31		Y2 = AC 230 V, 3-position
ASY3L25	2.5	SSD31/00		Y1 = AC 230 V, 3-position
ASY3L45	4.5			N = AC 230 V, neutral
ASY8L15	1.5	SSD81		Y2 = AC 24 V, 3-position
ASY8L25	2.5	SSD81/00		Y1 = AC 24 V, 3-position
ASY8L45	4.5			G = AC 24 V, system potential (SP)
ASY8L45HF	4.5			
ASY6L15	1.5	SSD61, DC 0...10 V SSD61.2, DC 2...10 V		Y = DC 0/2...10 V, < 0.1 mA
ASY6L25	2.5	SSD61..00		G0 = AC/DC 24 V, system neutral (SN)
ASY6L45	4.5			G = AC/DC 24 V, system potential (SP)
ASY6L45HF	4.5			



9

 ASY98

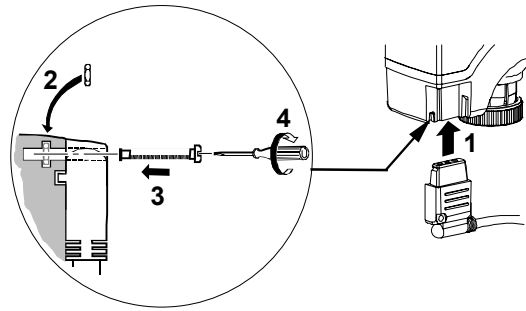


10

  ASY99, ASY100

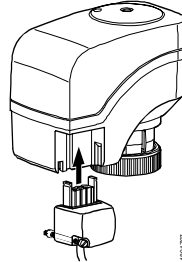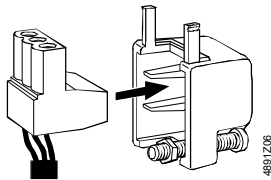


 
- ASY99 → SSA81/00
SSB81/00
SSP81/00
SSP81.04/00
- ASY100 → SSA61/00
SSB61/00
SSP61/00



11



- de Hubkalibration
- en Stroke calibration
- fr Calibrage de la course
- sv Lyfthöjdskalibrering
- nl Slagcalibratie
- it Calibrazione corsa
- fi Iskunpituuden kalibrointi
- es Calibración de la carrera
- da Slaglængdekalibrering
- pl Kalibracja skoku
- cz Kalibrace zdvihu
- hu Lökettbeállítás
- el Διαμόρφωση διαδρομής εμβόλου
- ru калибровка хода
- zh 行程校准

  SSA61.., SSB61.., SSP61..:

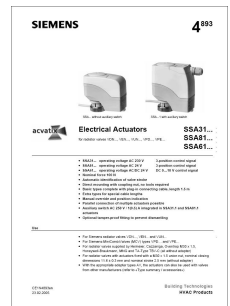
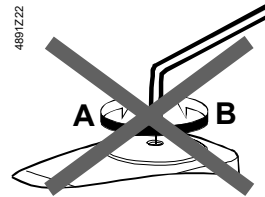


- SSA.. N4893
SSB.. N4891
SSP.. N4864

 
 
11

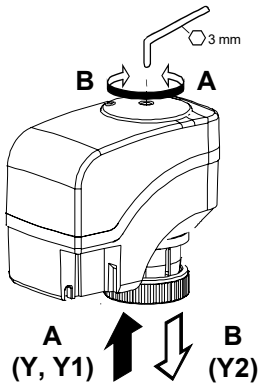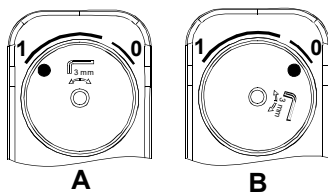

4893Z17

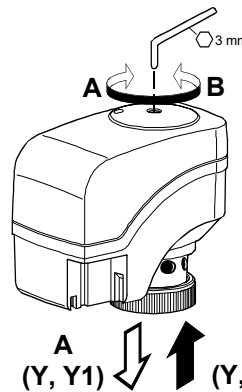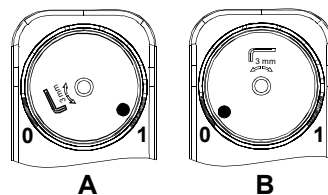  


4891Z25

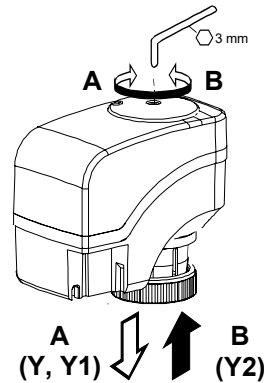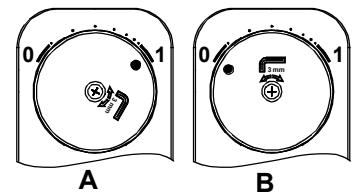  

4864Z25

12

 
SSA31.1, SSA81.1

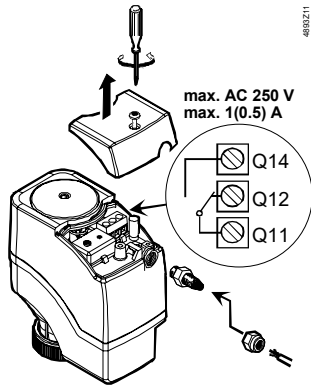

4893Z11

H03VV-F, 2x0.5...0.75 mm²


 
SSB31.1, SSB81.1

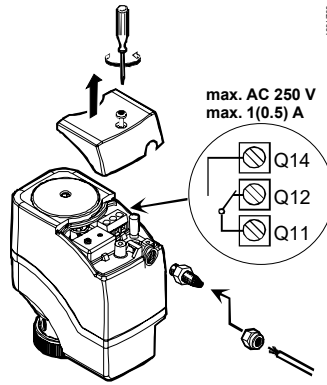



4891Z08

H03VV-F, 2x0.5...0.75 mm²

  13

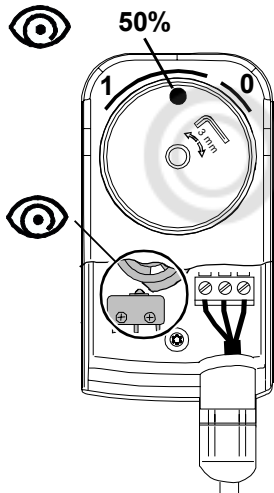


4893Z12a

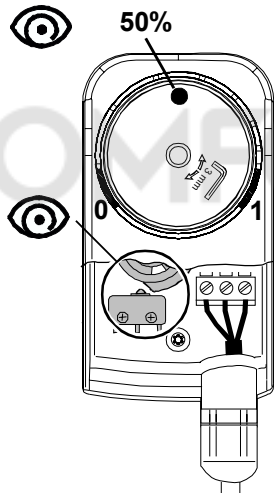  

4891Z15a


14

 0...50 %

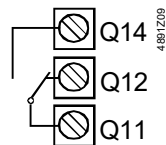


4891Z09

 0...< 50 %

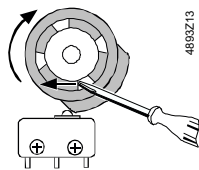


4893Z13

 50...1 %

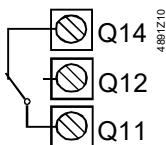

4891Z10

 0...> 50 %

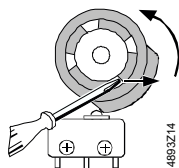

4893Z14